

REMOTE CONTROL FUNCTIONS

 : Power/Standby

MUTE: Press "MUTE" to mute all output.

BT: Press "BT" to use BT input mode. The LED Display will blink while searching for a BT device, pair with "Bobtot W58" in your mobile device BT menu.

ARC: Press "ARC" to use ARC input mode.

OPT: Press "OPT" to use Optical input mode.

COA: Press "COA" to use Coaxial input mode.

DVD: Press "DVD" to use DVD input mode.

AUX: Press "AUX" to use AUX input mode.

USB/SD: Press "USB/SD" to use USB or SD input mode.

FM: Press "FM" to use FM input mode.

5.1/2.1: Press "5.1/2.1" to change from 2.1 to 5.1 surround sound.

SLEEP-/+: Set the sleep time.

SAVE: Press "SAVE" to save FM channels for memory.

TUNE+/-: Tuning the FM channels

⏮: In USB/SD mode, press to play the previous song.

CH- In FM mode, press to go to the previous radio station channel.

⏸: Short Press to play/pause in BT/USB/SD mode.

AUTO Long press to search for the FM channels automatically/ stop to search for the FM channels in FM mode

⏭: In USB/SD mode, press to play the next song.

CH+ In FM mode, press to go to the next radio station channel.

FRONT: Press "FRONT" to select the front speakers, the output level can be adjusted by using the "VOL-/+ " buttons.

CENT: Press "CENT" to select the center speakers, the output level can be adjusted by using the "VOL-/+ " buttons.

REAR: Press "SURR" to select the rear satellite speakers, the output level can be adjusted by using the "VOL-/+ " buttons.

SUBWOOFER: Press "SUB" to select the subwoofer, the output level can be adjusted by using the "VOL-/+ " buttons.

VOL+/-: Adjust the main volume.

MIC+/-: Adjust the volume of microphone when plugging in the microphone. In USB/SD mode (no microphone), press to adjust EQ (1/2/3/4/5/off) (POP, ROCK, JAZZ, CLASSIC, COUNTRY)

ECHO+/-: Adjust the reverb when plugging in the microphone. If not plug in the microphone, press "ECHO+/-" to adjust the LED display brightness showing in the front of subwoofer.

0-9 NUMBER: In USB/SD mode. press the number buttons to select the desired track. In FM mode, press the number buttons to select the desired radio station.

REPEAT: Press to single loop (music)/repeat all songs/random playback in USB/SD mode.

RESET: Press to default state

NOTE:

1. Turn on the unit, please press the "Power" button before selecting the input mode.
2. If the remote control does not work, please replace the batteries and try again.

